

Cut along the SOLID lines
SCORE and FOLD along the dashed lines
DISCARD the GREY areas



Single Page Dice Catcher

Single Page Dice Catcher


The Single Page Dice Catcher Assembly Instructions

CUTTING GUIDE

CUT along SOLID lines

SCORE and FOLD on DASHED lines

GREY represents areas to be cut away and discarded.

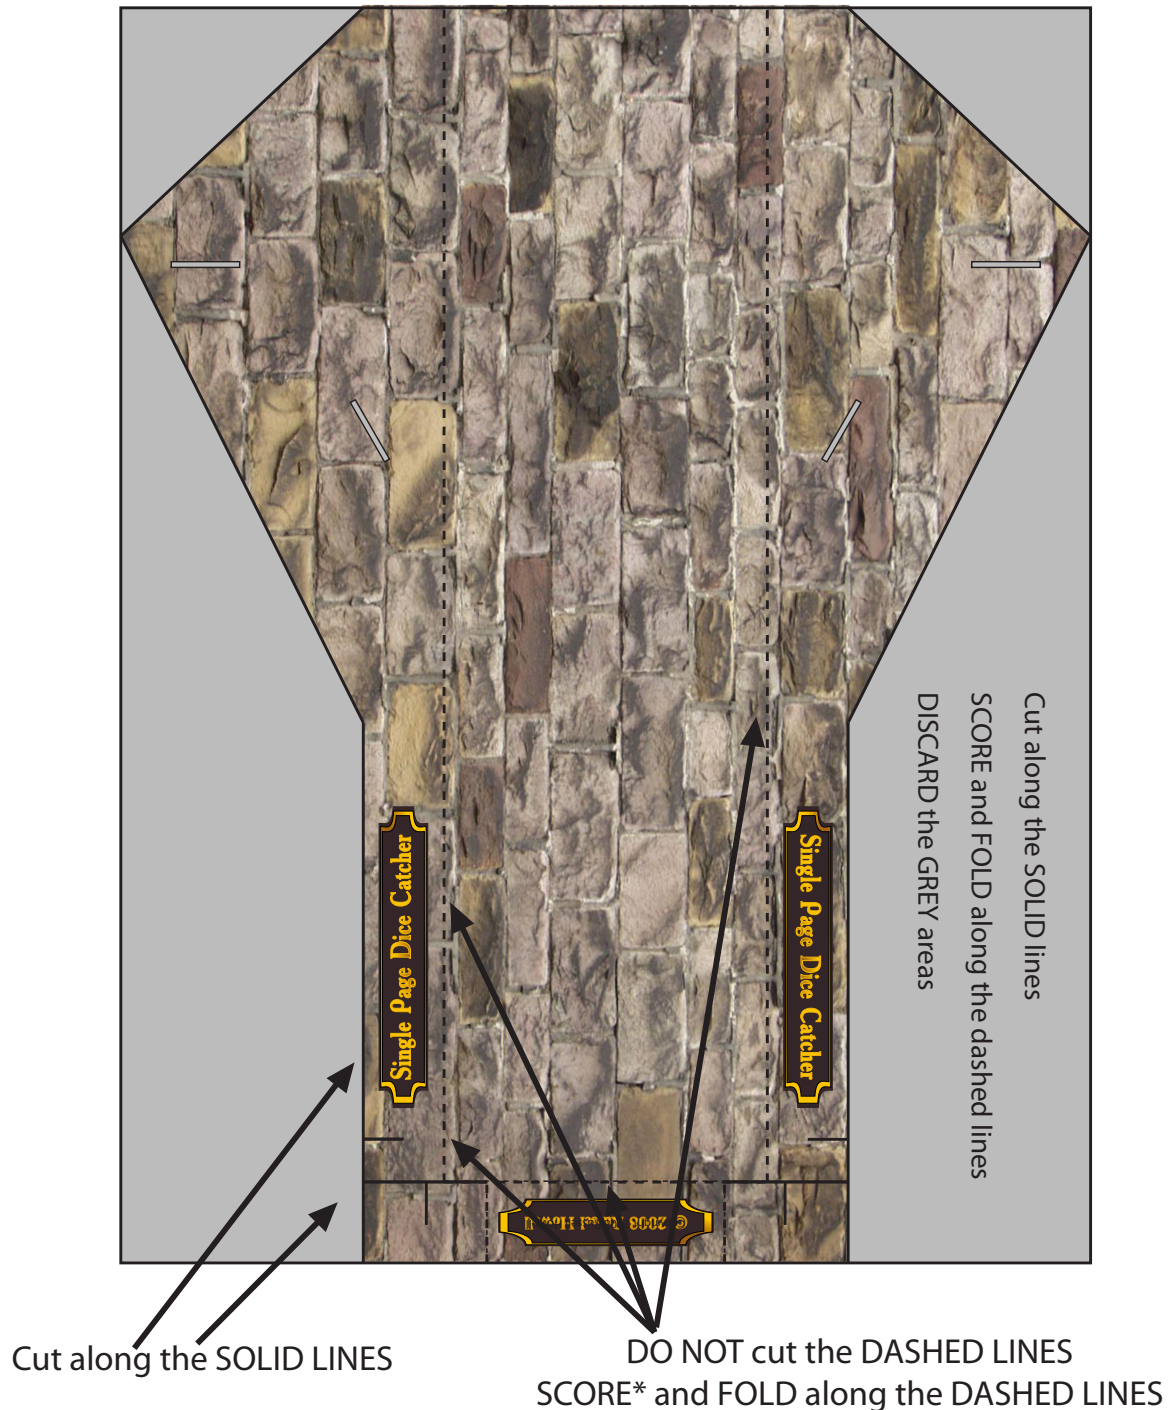

*To score is to create a line or depression in the paper that will help the paper fold. Lightly run a sharp object along the line. DO NOT CUT THE PAPER IN THE PROCESS.

Designed for 8.5" x 11" paper. Use a piece of at least 65 lb cover (175 g/m²) cardstock for best results.

Select borderless printing, on supported printers, for easier cutting.

This expansion allows the Single Page Dice Tower to support a large number of dice.

The Single Page Dice Catcher Assembly Instructions

FOLDING AND ASSEMBLY

Score* and FOLD along DASHED lines

